 




## CORDLESS LEAF BLOWER

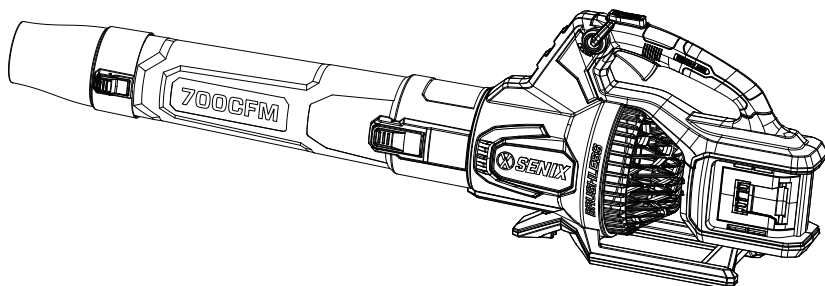

**CAUTION:** Before using this tool, please read this manual completely, and follow all operating safety measures.

- SAFETY
- ASSEMBLY
- OPERATION
- MAINTENANCE
- WARRANTY

**YAT USA INC.** 10506 Bryton Corporate Center Dr, #500 Huntersville, NC 28078  
For customer support, please call 1-800-261-3981 or email us at [senix.support@yatusa.com](mailto:senix.support@yatusa.com)

# TABLE OF CONTENTS

SAFETY & INTERNATIONAL SYMBOLS.....	2
SAFETY INSTRUCTIONS.....	3
KNOW YOUR UNIT .....	6
SPECIFICATIONS.....	7
ASSEMBLY.....	7
OPERATION.....	9
MAINTENANCE.....	10
TROUBLESHOOTING.....	11
WARRANTY.....	12

## SAFETY & INTERNATIONAL SYMBOLS

The following table depicts and describes safety symbols that may appear on this product. Read, understand and follow all instructions on the machine before attempting to assemble and operate.



Caution / Warning.



**WARNING** - To reduce the risk of injury, user must read instruction manual.



Wear eye protection.



Wear ear protection.



Wear respiratory protection.



Do not expose the product to rain or wet conditions.



Wear protective, slip-resistant footwear.



Wear protective gloves.



Failure to keep long hair away from the air intake could result in personal injury.



Failure to keep loose clothing from being drawn into air intake vents could result in personal injury.



Do not operate without tube properly connected.



Keep all bystanders at least 50 ft. away.



Thrown objects can ricochet and result in personal injury or property damage.



Do not dispose of battery packs in rivers or immerse in water.



Do not dispose of battery packs in fire. They will explode and cause injury.



Do not disassemble, crush, heat above 212°F (100°C); Never expose the battery to microwaves or high pressures.



Indoor use only. Only use battery charger indoors.



Mexican Certification Mark.



Complies with ETL standards.

# SAFETY INSTRUCTIONS

## GENERAL POWER TOOL SAFETY WARNINGS

### **WARNING!**

*Read all safety warnings, instructions, illustrations and specifications provided with this power tool. Failure to follow all instructions listed below may result in electric shock, fire and/or serious injury.*

**Save all warnings and instructions for future reference.**

*The term "power tool" in the warnings refers to your mains-operated (corded) power tool or battery-operated (cordless) power tool.*

- Keep out of reach of children.
- Dress Properly – Do not wear loose clothing or jewelry. They can be caught in moving parts. Use of rubber gloves and proper footwear is recommended when working outdoors. Secure long hair to prevent contact with moving parts.
- Use Safety Glasses.
- Wear Appropriate Personal Hearing Protection During Use – Under some conditions and duration of use, noise from this product may contribute to hearing loss.
- Do not use product for any job except that for which it is intended.
- Check for damaged parts before use of product. If a part is damaged it should be repaired or replaced. Please call our customer service help line for assistance.
- Lighting – Only operate blower in daylight.
- Don't overreach – Keep proper footing and balance at all times.
- Avoid Dangerous Environments – Don't use blower in rain, damp or wet locations. Do not operate blower near gasoline or explosive materials. Motors in these tools normally spark, and the sparks might ignite.
- Stay Alert when operating the blower.
- When not in use, products should be stored indoors in dry conditions.
- Maintain Blower Properly - Keep clean for best performance.

## BLOWER SAFETY WARNINGS

- This blower is intended for consumer use only. Commercial use of this product is

prohibited and will void the manufacturer's warranty.

- Prevent unintentional use. Ensure the throttle trigger is released and variable speed control is in the off position before connecting to battery pack, picking up or carrying the product.
- Disconnect the battery pack from the product before making any adjustments, changing accessories, or storing product. Such preventive safety measures reduce the risk of starting the product accidentally.
- When operating the unit, never point the blower nozzle in the direction of people or pets or in the direction of windows. Use extra caution when blowing debris near solid objects, such as trees, automobiles, and walls.
- Secure the unit properly when transporting it.
- Never douse or squirt the unit with water or any other liquid. Clean the unit after each use as described in the cleaning and storage section.
- Carefully inspect the blower prior to use and follow all label and marking instructions.
- Do not use the blower with any obstructions in the openings.
- Service on the blower must be performed by Authorized Service Centers.

## BATTERY PACK AND BATTERY CHARGER SAFETY WARNINGS

- Only charge SENIX Batteries with the appropriate SENIX Charger. The use of any other charger may create a fire risk.
- Use SENIX products with the appropriate battery pack. The use of any other battery packs may create a fire risk.

### **WARNING!**

Only use following batteries: B20X2/B25X2/B40X2/B50X2/B60X2/B80X2 and chargers: CHX2-L/CHX2/CHQX2/CHQX2-M/CHDX2-M.

- When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another.

Shorting the battery terminals together may cause burns or a fire.

- Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, seek medical help.
- Do not use a battery pack or product that is damaged or modified. Damaged or modified batteries may result in fire, explosion or risk of injury.
- Do not expose a battery pack or product to fire or excessive temperature. Exposure to fire or temperature above 212°F (100°C) may cause explosion.
- Follow all charging instructions and do not charge the battery pack or product outside of the temperature range specified in the instructions. Charging improperly or at temperatures outside of the specified range may damage the battery and increase the risk of fire.
- Do not modify or attempt to repair the battery pack.

## RESIDUAL RISKS

Even if you are operating this product in accordance with all the safety requirements, potential risks of injury and damage remain.



### **WARNING!**

 
This product produces an electromagnetic field during operation. This field may under some circumstances interfere with active or passive medical implants! To reduce the risk of serious or fatal injury, please consult with doctor before operating this product!

## INTENDED USE

The blower is designed to clear hard surfaces and debris.



# KNOW YOUR UNIT

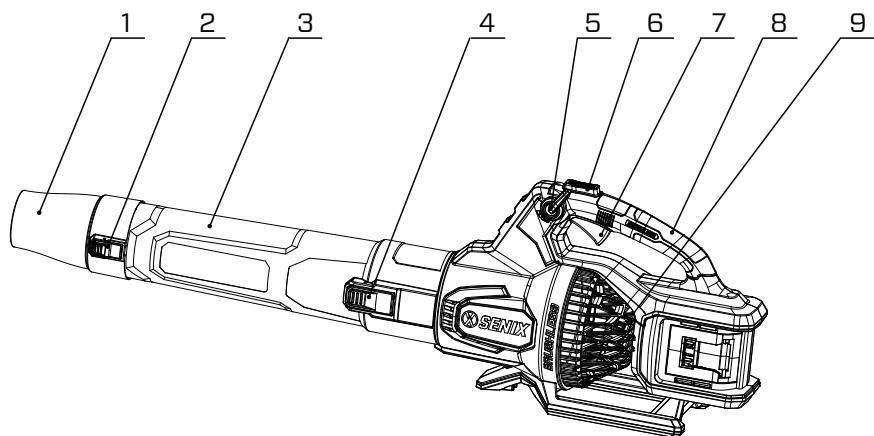

## APPLICATIONS

Model: BLAX2-M2

Designed as a blower to clear light debris.

1	Blower Nozzle
2	Nozzle-release Button
3	Blower Tube
4	Tube-release Button
5	Cruise Control Switch

6	Turbo Boost Button
7	Variable Speed Trigger
8	Handle
9	Intake

## SPECIFICATIONS

Model	BLAX2-M2
Input Voltage	36V $\approx$ (40V $\approx$ Max*)
Motor Type	Brushless
No-Load Speed	0-22500 RPM (Max)
Air Speed	145 MPH
Air Volume	700 CFM
Weight (Tool Only)	5.51 lbs / 2.5 Kg

\*40 V Max battery, maximum initial battery voltage is 40 V. The nominal voltage is 36 V.

## ASSEMBLY

1. Unpack all parts and lay them on a flat surface.
2. Remove all packing materials and shipping devices, if applicable.
3. Included in the box:
  - (1) Cordless Leaf Blower
  - (2) 4.0 Ah Battery
  - (1) 20V Dual Port Charger
  - (3) Instruction Manual
4. If you find that parts are missing or damaged, do not use the product and contact the dealer.
5. Ensure that you have all the accessories and tools needed for assembly and operation.



## WARNING!



Wear protective gloves for assembly work and always lay the product on a flat and stable surface while assembling.



Follow the assembly instructions step-by-step and use the pictures provided as a visual guide to easily assemble the product. Do not insert the battery pack before the blower is completely assembled.

## INSTALLING/REMOVING THE BLOWER TUBE



## WARNING!

To avoid serious personal injury and damage to the blower, shut the blower off before removing or installing an attachment.



## WARNING!

Use only as described in this manual. Use only manufacturer's recommended attachments.

1. Align the groove on the tube with the notch on the blower housing. Push the tube onto the blower housing until the latch snaps into place.

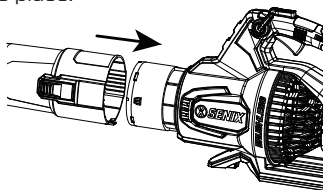 


Fig. 2

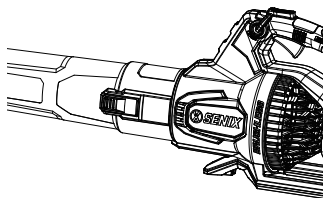 


Fig. 3

2. To remove the tube, press and hold the tube-release button to disengage the latch, then pull the tube away from the blower (Fig.4).

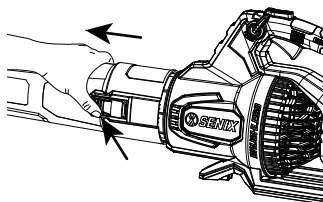 


Fig. 4

## INSTALLING/REMOVING THE BLOWER NOZZLE

1. Align the groove on the blower nozzle with the notch on the tube. Push the nozzle onto the tube until it snaps into place.

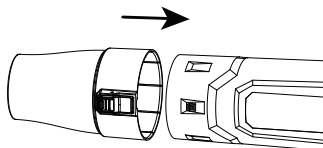 


Fig. 5

 


Fig. 6

2. To remove the blower nozzle, press and hold the nozzle-release button to disengage the latch, then pull the nozzle away from the blower tube.

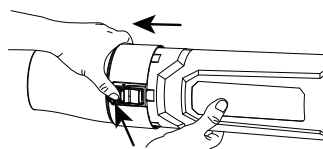 


Fig. 7

## INSTALLING/REMOVING BATTERY PACK



### WARNING!

Always remove the battery pack from the product when you are assembling parts, making adjustments, cleaning, or when not in use.

### To install:

Align and slide the battery packs into the slots on the battery docking port until it locks in place.


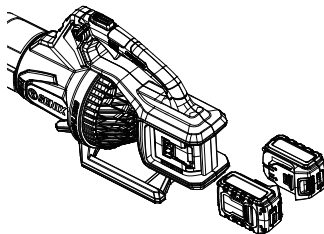 


Fig. 8

### To remove:

 Press the battery-release button and remove the battery pack from the blower.

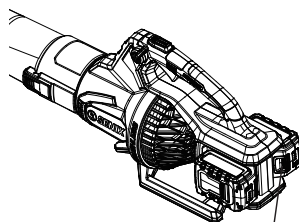

Battery-Release Button

Fig. 9



### NOTE:

Refer to the manuals for the charger and battery pack for more details.

## OPERATION

### SWITCHING ON/OFF



### NOTE:

Before use, turn the cruise control dial counterclockwise to the off position.

### VARIABLE SPEED TRIGGER.

1. Press the air-speed trigger to turn on the blower.
2. The air speed of the blower is controlled with the variable speed trigger. More pressure on the trigger results in higher air speed; less pressure on the trigger results in lower air speed.

3. Release the air-speed trigger to turn off the blower.

### CRUISE CONTROL DIAL FUNCTION

The blower can be locked at any speed with the cruise control dial.

1. Turn the cruise control dial clockwise to start the blower. The air speed will increase as the dial is rotated clockwise.
2. To decrease the air speed, turn the cruise control dial counterclockwise.
3. Keep turning the cruise control dial counterclockwise to the off position to stop the blower.



### NOTE:

If the cruise control dial is not turned back to the off position before the battery is removed, the blower will not start when a fully charged battery is installed. This is a protection feature to help prevent accidental startup. Turn the cruise control dial counterclockwise to the off position to deactivate the protection. Then press the air-speed trigger to power the blower.



### NOTE:

Press and hold the turbo boost button while working to increase the air speed to the maximum level. The blower will resume the previous speed when the turbo boost button is released.

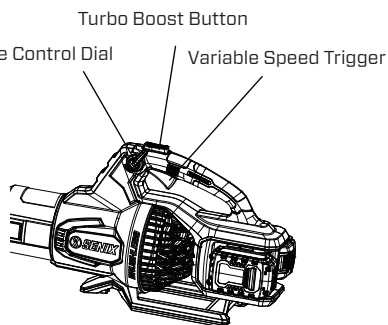 


Fig. 9

## GENERAL

1. Always hold the product by its handle. Keep the blower dry and clean.
2. Ensure that the air vents are always

unobstructed and clear. Blocked air vents may lead to overheating and damage the product.

3. Before operating the blower, make sure to check each function is working properly.
4. While operating the blower, it is crucial to avoid contact with any objects, as this may lead to damage.



### WARNING!

Always wear eye, respiratory, hearing, hand, foot, and body protection to reduce the risk of injury when operating the blower.

## BLOWING

1. When operating the blower, hold the tube approximately 4 inch (10cm) above the ground and walk slowly forward using a sweeping motion from side to side.

## MAINTENANCE



### WARNING!

Always switch the blower off, remove the battery pack, and let the blower cool down before performing cleaning and maintenance work! Only perform cleaning and maintenance work according to these instructions! Any additional maintenance or repairs must be performed by an Authorized Service Center.

## CLEANING

- Clean the debris from the blower tube with a soft cloth.
- Clean the intake vents from debris to prevent any damage.
- Do not use strong detergents. Household cleaners that contain aromatic oils such as pine and lemon, can damage plastic.
- Clean any additional debris with a soft cloth. The tool should never come in contact with water.

## TRANSPORTATION

- Always carry the product by its handle.
- Secure the blower properly when transporting.

## STORAGE

- Store the blower and its accessories in a dry, well-ventilated place.



### NOTE:

To prolong battery life, never store battery pack in a completely discharged condition. Make sure the battery pack is charged every six months.

## DISPOSAL

When the blower is no longer usable, do not dispose of it with household waste. It must be recycled at a proper facility.



Electrical products should not be discarded with household products. Used electrical products must be collected separately and disposed of at collection points provided for this purpose. Talk with local authorities or dealer for advice on recycling.

## TROUBLESHOOTING

Suspected malfunctions are often due to causes that the users can fix themselves. Therefore, check the blower using this section. In most cases the problem can be solved quickly.

Problem	Possible Cause	Solution
Blower does not start	Battery pack not properly attached	Remove from blower and reattach
	Battery pack capacity too low	Remove and charge battery pack
	Battery pack damaged	Contact an Authorized Service Center for repair
	Variable Speed Trigger not set on start position	Refer to chapter "SWITCHING ON/OFF"
Blower does not reach full power	Battery pack capacity too low	Charge battery pack
	Air vents are blocked	Clean the air vents
Vibration or noise is excessive	Stop operating the blower to prevent further damage	Contact an Authorized Service Center for repair
Blower suddenly stops	Battery pack capacity too low	Remove and recharge battery pack
	Battery too hot	Remove battery pack and let it cool down

# WARRANTY

## SENIX TOOLS LIMITED WARRANTY

**FOR FIVE YEARS** from the date of original purchase this product is warranted against defects in material or workmanship. WITH PROOF OF ORIGINAL PURCHASE a defective product will receive free repair. If the product cannot be repaired it will be replaced free of charge.

For details to obtain warranty coverage, visit [senixtools.com](http://senixtools.com), email [senix.support@yatusa.com](mailto:senix.support@yatusa.com) or call **1-800-261-3981**.

- This warranty does not cover repairs necessary due to product accident or abuse, or failure to operate or maintain the product according to all supplied instructions.
- This warranty does not cover an included battery pack or charger, which offer three-year, replacement-only coverage. See battery pack or charger instruction manuals for complete warranty details.
- This warranty does not cover expendable items that can wear out from normal use within the warranty period, including but not limited to drill bits, cutting blades and trimmer spool or line.
- This warranty does not apply to damage resulting from repairs to the product made or attempted by other than SENIX authorized agents.
- This warranty does not cover the cost of mailing or transporting the power tool to receive warranty coverage.
- The warranty is void if the product has been used for commercial, professional, or rental service purposes.
- The warranty applies to the original retail purchaser and is not transferable.
- Proof of purchase is required to obtain warranty coverage.

THIS WARRANTY IS GIVEN IN LIEU OF ALL OTHERS, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, AND EXCLUDES ALL INCIDENTAL OR CONSEQUENTIAL DAMAGE.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so these limitations may not apply to you. This warranty gives you specific legal rights and you may have other rights which vary in certain states or provinces.

**NOTE:** Battery pack warranty voided if the battery pack is tampered with in any way. SENIX is not responsible for any injury caused by tampering and may prosecute warranty fraud to the fullest extent permitted by law.

**60-DAY MONEY-BACK GUARANTEE.** If for any reason within 60 days from the date of original purchase you are not completely satisfied with the performance of this SENIX product, you can return it with the original sales receipt for a full refund.

**Latin America:** This warranty does not apply to products sold in Latin America. For products sold in Latin America, see the country-specific warranty information contained in the packaging, call the retailer from which it was purchased, or visit the website for warranty information.

**Free warning label replacement:** If your warning labels become illegible or are missing, call **1-800-261-3981** for a free replacement.

**REGISTER ONLINE** - [senixtools.com/pages/product-registration](http://senixtools.com/pages/product-registration)

Thank you for your purchase! Register your product now for:

**Warranty Service:** Registering your product will help you obtain more efficient warranty service in case of a problem with your product.

**Confirmation of Ownership:** In case of an insurance loss, such as fire, flood, or theft, your ownership registration will serve as proof of purchase.

**For your safety:** Registering your product will allow us to contact you in the unlikely event a safety notification is required under the Federal Consumer Safety Act.



YAT USA INC. 10506 Bryton Corporate Center Dr, #500 Huntersville, NC 28078

For customer support, please call 1-800-261-3981 or email us at [senix.support@yatusa.com](mailto:senix.support@yatusa.com)

# GARANTIE

## SENIX TOOLS GARANTIE LIMITÉE

**POUR CINQ ANS** à partir de la date d'achat originale, ce produit est garanti contre tout défaut de matériau ou de fabrication. AVEC LA PREUVE DE L'ACHAT D'ORIGINE, un produit défectueux sera réparé gratuitement. Si le produit ne peut pas être réparé, il sera remplacé gratuitement.

Pour obtenir des détails sur la couverture de la garantie, visitez [senixtools.com](http://senixtools.com), envoyez un courriel à [senix.support@yatusa.com](mailto:senix.support@yatusa.com) ou appelez **1-800-261-3981**.

- Cette garantie ne couvre pas les réparations nécessaires en raison d'un accident ou d'un abus du produit, ou d'un manque d'utilisation ou d'entretien du produit conformément à toutes les instructions fournies.
- Cette garantie ne couvre pas le bloc-piles ou le chargeur inclus, qui offrent une couverture de remplacement de trois ans seulement. Consultez les manuels d'instructions du bloc-piles ou du chargeur pour plus de détails sur la garantie.
- Cette garantie ne couvre pas les articles non durables qui peuvent s'user dans le cadre d'une utilisation normale pendant la période de garantie, y compris, mais sans s'y limiter, les mèches, les lames de coupe et la bobine ou le fil de la débroussailleuse.
- Cette garantie ne s'applique pas aux dommages résultant de réparations du produit effectuées ou tentées par d'autres que les agents agréés SENIX.
- Cette garantie ne couvre pas les frais d'envoi ou de transport de l'outil électrique pour bénéficier d'une couverture de la garantie.
- La garantie est annulée si le produit a été utilisé à des fins commerciales, professionnelles ou de location.
- La garantie s'applique au premier acheteur au détail et n'est pas transférable.
- Une preuve d'achat est nécessaire pour obtenir la couverture de la garantie.

CETTE GARANTIE EST DONNÉE EN LIEU ET PLACE DE TOUTES LES AUTRES, Y COMPRIS LA GARANTIE IMPLICITE DE VALEUR MARCHANDE ET D'ADAPTATION A UN USAGE PARTICULIER, ET EXCLUT TOUT DOMMAGE INCIDENT OU CONSÉQUENTIEL.

Certains états n'autorisent pas les limitations sur la durée d'une garantie implicite ou l'exclusion ou la limitation des dommages accessoires ou indirects, de sorte que ces limitations peuvent ne pas s'appliquer à votre cas. Cette garantie vous donne des droits légaux spécifiques et vous pouvez avoir d'autres droits qui varient dans certains états ou provinces.

**NOTE :** La garantie du bloc-batterie est annulée si le bloc-batterie est altéré de quelque manière que ce soit. SENIX n'est pas responsable des blessures causées par une manipulation et peut poursuivre les fraudeurs à la garantie dans toute la mesure permise par la loi.

**GARANTIE DE REMBOURSEMENT DE 60 JOURS.** Si, pour quelque raison que ce soit, vous n'êtes pas entièrement satisfait des performances de ce produit SENIX dans les 60 jours suivant la date d'achat, vous pouvez le renvoyer avec le ticket de caisse original pour un remboursement complet.

**Amérique latine :** Cette garantie ne s'applique pas aux produits vendus en Amérique latine. Pour les produits vendus en Amérique latine, consultez les informations de garantie spécifiques au pays contenues dans l'emballage, appelez le détaillant chez qui vous avez acheté le produit ou visitez le site Web pour obtenir des informations sur la garantie.

Remplacement gratuit de l'étiquette d'avertissement : Si vos étiquettes d'avertissement deviennent illisibles ou manquent, appelez **1-800-261-3981** pour un remplacement gratuit.

**ENREGISTREMENT EN LIGNE** - [www.senixtools.com/pages/product-registration](http://www.senixtools.com/pages/product-registration)

Nous vous remercions de votre achat ! Enregistrez votre produit dès maintenant pour bénéficier du service de garantie :

L'enregistrement de votre produit vous permettra d'obtenir un service de garantie plus efficace en cas de problème avec votre produit.

**Confirmation de propriété :** En cas de sinistre (incendie, inondation ou vol), l'enregistrement de votre produit servira de preuve d'achat.

**Pour votre sécurité :** L'enregistrement de votre produit nous permettra de vous contacter dans le cas improbable où une notification de sécurité serait requise en vertu de la loi fédérale sur la sécurité des consommateurs.



YAT USA INC. 10506 Bryton Corporate Center Dr, #500 Huntersville, NC 28078

Pour le service clientèle, veuillez appeler le **1-800-261-3981** ou nous envoyer un courriel à [senix.support@yatusa.com](mailto:senix.support@yatusa.com).



